

## UPDATE FPS/SILEX

1. Switch camera off [k5]
2. Insert USB card
3. Press & hold [k5], then press release [k1]
4. Progress bar shows update process



## UPDATE LENS MODULES

Attach every Lens Module Hasselblad, Contax, Rollei to FPS or Silex and execute...

1. Switch camera off [k5]
2. Insert USB card
3. Press & hold [k4 & k6], then press release [k1]
4. Confirm „Adapter Update“ by pressing [k2]
5. Old version gets deleted and progress bar shows update process